



Town of Middlefield

Communications Committee

Blu-ray Player Instructions

Using Blu-ray Disc player

To play a Blu-ray/DVD/CD disc:

1. Use the pole hanging to the right of the enclosure cabinet to pull down the screen.
2. Turn on the power switch to the left of the enclosure cabinet.
3. Turn on the power to the Behringer Europower Mixer.
4. Push the power button on the Epson remote and wait for the projector name to display.
5. Push the power button on the Blu-ray remote to turn on the player.
6. Push the button below the power button to open and close the disc tray.
7. Use the remote buttons to play, stop, pause, etc.
8. Use the Europower **MAIN** level knob to adjust the volume.
9. After using the player, reverse the above steps.
10. To retract the screen, pull down and let go as you would with a window shade – it will slowly retract.

To play from a USB device:

1. Use the pole hanging to the right of the enclosure cabinet to pull down the screen.
2. Turn on the power switch to the left of the enclosure cabinet.
3. Turn on the power to the Behringer Europower Mixer.
4. Push the power button on the Epson remote and wait for the projector name to display.
5. Insert your USB device in the slot in the front of the Blu-ray player.
6. Push the power button on the Blu-ray remote to turn on the player.
7. Press the **HOME** button and select **Storage** in the **MULTIMEDIA** panel.
8. Select the USB device.
9. Browse your device and then select the media you want to play.
10. Use the remote buttons to play, stop, pause, etc.

11. Use the Europower **MAIN** level knob to adjust the volume.
12. After using the player, reverse the above steps.
13. To retract the screen, pull down and let go as you would with a window shade – it will slowly retract.